












ROCK GUARD


INSTALLATION MANUAL



WHAT'S INCLUDED

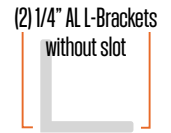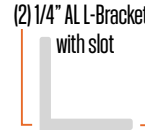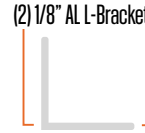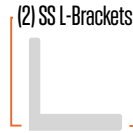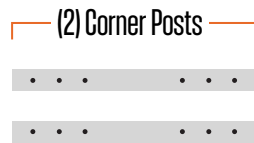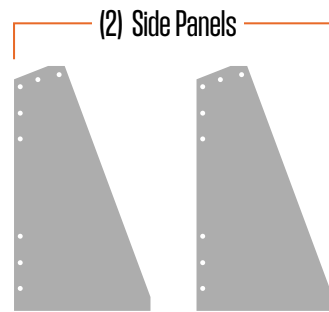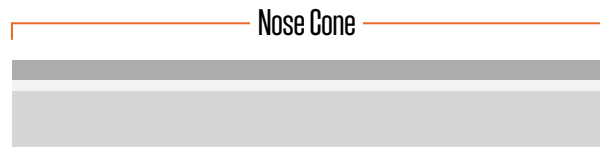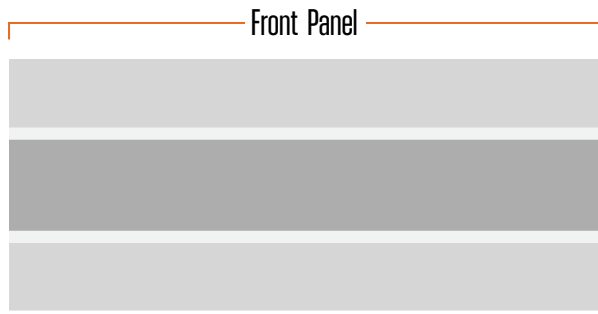

TOOLS NEEDED

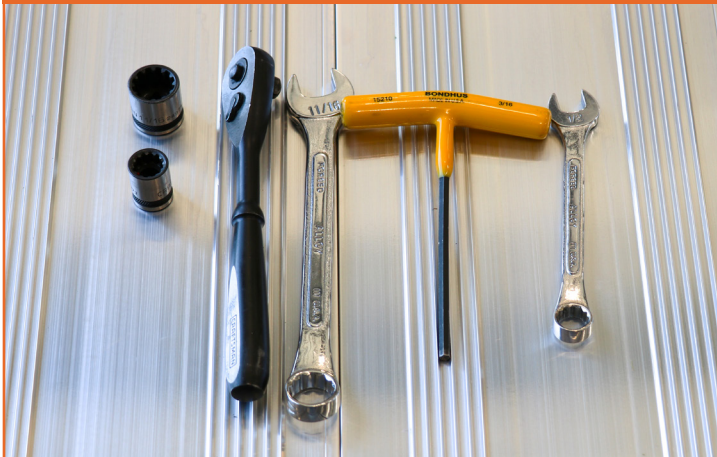

You will need the following tools for assembly:

11/16" wrench


1/2" wrench

3/16" Allen wrench

11/16" socket wrench - **(Optional)**

** We suggest having a second person help with assembly. **

STEP 1

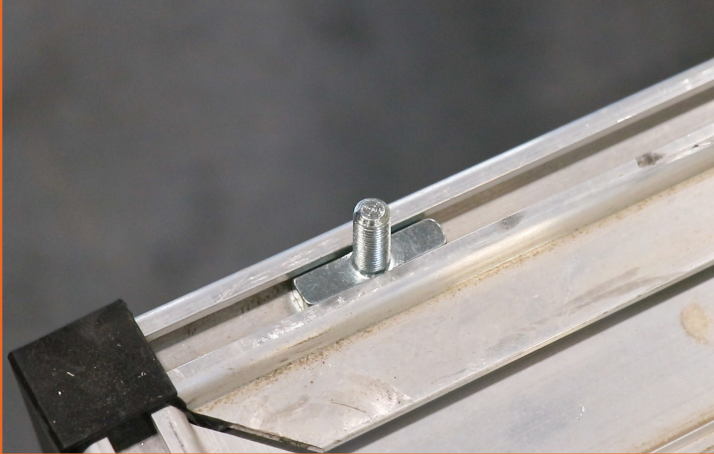

On the trailer Install (1) L-Track stud in each side rail and (4) L-Track studs in the front rail.

Discard the washer for the L-Track studs.

STEP 2



Steps 2-7: We recommend assembling the Rock Guard separately from the trailer on a table or workbench,

For this step you will need the following:


Front panel, side panel, corner post, L-Bracket, and 2 3/4" bolt

Place the front panel face down.

Place the side panel on the inside of the front panel and align with pre-drilled holes.

Align the corner post inside the side panel and attach the 1/4" AL L-Bracket with slot using a 2 3/4" bolt. Slot is parallel with side panel.

STEP 3

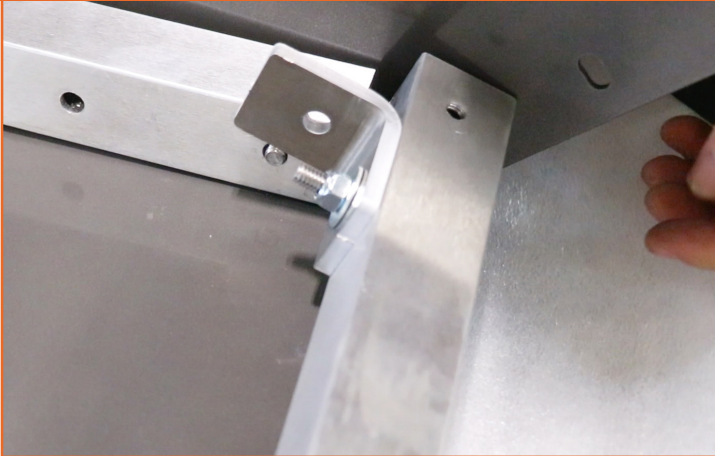

Attach a 1/4" AL L-Bracket with no slot to each side of the cross member using a 2 1/2" bolt for vertical connection.

STEP 4




Use a 2 3/4" bolt for horizontal connection through the side panel, side post, front panel, and L-Bracket.

STEP 5



Attach (4) 2 1/2" bolts in the remaining slots on each of the corner posts.

STEP 6

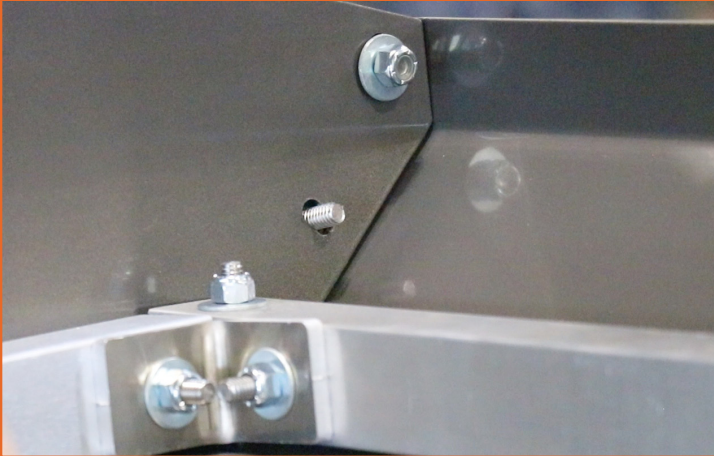

Attach the nose cone to the side panels using 3/4" bolts on the sides and 2 1/2" bolts on the front.


STEP 7



Attach (2) 1/8" AL L-Brackets to the bottom of the front panel with a 3/4" bolt. Slot is on the deck.

Attach (1) SS L-Bracket on each side panel using 3/4" bolts. Slot is on the deck.

STEP 8

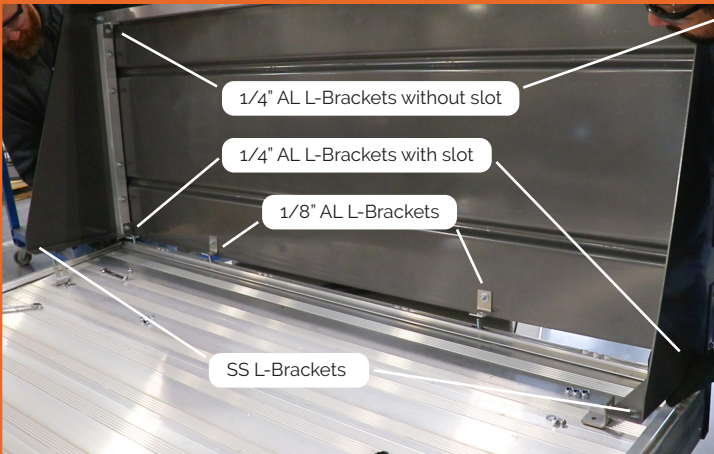

Move the Rock Guard to the trailer and attach the (6) L-Brackets to the L-Track studs using washers and tighten nuts.

Tighten all fasteners.